



**Office of the Administrative Director – Financial Services Department**

THE JUDICIARY • STATE OF HAWAII • 1111 ALAKEA STREET, 6<sup>TH</sup> FLOOR • HONOLULU, HAWAII 96813-2807  
TELEPHONE (808) 538-5800 • FAX (808) 538-5802

**Terri Gearon**  
FINANCIAL SERVICES DIRECTOR

February 19, 2020

MEMORANDUM

TO WHOM IT MAY CONCERN

FROM: Terri Gearon /s/ Terri Gearon  
Financial Services Director

SUBJECT: ADDENDUM NO. 1  
INVITATION FOR BID NO. J20385  
KAPUAIWA BUILDING SEPARATE STORM DRAIN AND BASEMENT SANITARY  
SEWER SYSTEMS  
JUDICIARY PROJECT IDENTIFIER: JUD-1718-07-014  
TAX MAP KEY: 2-1-025:003 OAHU, HAWAII

Transmitted herewith is a copy of Addendum No. 1 for your review. A copy of this Addendum is also available from our Judiciary web page at <http://www4.hawaii.gov/jud/>.

Please direct questions to Mr. Anthony Koyamatsu of the Capital Improvement Division at (808) 539-4704 or email at [Anthony.Koyamatsu@courts.hawaii.gov](mailto:Anthony.Koyamatsu@courts.hawaii.gov).

# **ADDENDUM NO. 1**

TO CONSTRUCT

**KAPUAIWA BUILDING  
SEPARATE STORM DRAIN AND BASEMENT  
SANITARY SEWER SYSTEMS  
JUDICIARY PROJECT IDENTIFIER: JUD-1718-07-014  
TAX MAP KEY: 2-1-025:003  
OAHU, HAWAI'I**

FOR **THE JUDICIARY**  
STATE OF HAWAI'I

**RODNEY MAILE**  
**ADMINISTRATIVE DIRECTOR OF THE COURTS**  
THE JUDICIARY - STATE OF HAWAI'I

February 19, 2020

This addendum modifies the original Solicitation Documents for the Project dated January 2020 and any previously issued addenda. The items in this addendum shall govern the work, taking precedence over previously issued specifications and drawings governing the items mentioned. Acknowledge receipt of this Addendum in the space provided on the Solicitation, Offer and Contract Form.

## **A. SUMMARY OF VOLUNTARY PRE-BID CONFERENCE**

A voluntary pre-bid conference was held at Aliʻiōlani Hale, 417 S. King St., Honolulu, Hawaii 96813 on February 5, 2020 at 10:00 AM. No offerors or interested parties attended the conference.

The sign-in sheet is included as Attachment A (1 page).

## **B. CLARIFICATIONS**

The following questions were submitted.









- Q: Please clarify the Contractor Duration, Allowance A and Allowance B on the "Solicitation Offer and Contract Form" Page 00410-5.
- A: There are no allowance items in the project so Allowance A and Allowance B may be disregarded. The Contract Duration will be subject to the Contractor's proposed schedule and permitting.
- Q: This request is in regards to Section 02722 Sanitary Sewer System, Duplex Grinder Pump Station and Package Sewer Pump Station shown on Sheet C006. International Wastewater Technologies, Inc. is respectfully requesting to substitute our Zoeller ZEP low pressure sewer, progressive cavity pump package (Zoeller information attached as Attachment B.
- A: The Zoeller ZEP low pressure sewer, progressive cavity pump package is acceptable for use on the project.
- Q: Are the contractors allowed to remove the existing trees in the vicinity of the work area? Access for construction activities, such as shoring and dewatering will be obstructed, especially by the existing palm trees.
- A: The project is located within the Hawaii Capital Special District and the Contractor is responsible for obtaining a Special District Minor Permit for any tree removal or replacement. Any tree removed having a trunk diameter of six inches or greater shall be replaced with a tree with a minimum 2" caliper pursuant to the Land Use Ordinance Section 21-9.30-4(a).
- Q: Specs Section 02050 Part 3.02 mentions tree protection but there doesn't seem to be callouts for protection of specific trees on the plans. Please confirm if an arborist is required.
- A: Please refer to Section 02050, 3.02 which includes the requirement for the Contractor to hire and consult with a Qualified Arborist for all tree protection matters.

END OF ADDENDUM NO. 1

**Kapuaiwa Building Separate Storm Drain and Basement Sanitary Sewer Systems  
417 SOUTH KING STREET, HONOLULU HI 96813**

**PRE-BID MEETING**

February 5, 2020

Name	Office/Company	Telephone	Fax
Alicia Plummer Signature: 	Judiciary	539-4712	539-4779
Signature: 	email: Alicia.M.Plummer@courts.hawaii.gov		
Tomoy Koyama Signature: 	Judiciary / CIP	539-4704	
Signature: 	email: <del>tomoy</del> synthony.koyamatt@courts.hawaii.gov		
Jason Lau Signature: 	Limtiaco Consulting	687-8724	—
Signature: 	email: jason@tlcghawaii.com		
Joanne Krippaehne Signature: 	Judiciary CIP		
Signature: 	email: Joanne.M.Krippaehne@courts.hawaii.gov		
Signature:	email:		
Signature:	email:		
Signature:	email:		
Signature:	email:		
Signature:	email:		
Signature:	email:		

# BASIN BUILDER MODIFIED



**COMPANY**

Zoeller Family of Water Solutions™

**PROJECT INFORMATION**

Project Name	
Contact Info	

Prepackaged Duplex Basin System, Pre-Plumbed, w/ Rail Systems  
(Stainless Steel Pump Lifting Cables Included)

**BASIC SYSTEM INFORMATION**

Build	Prepackaged
Type	Duplex
Discharge Exit	Side


Ball Valves & Check Valves Installed

Approx. Weight: 780 lbs

**INTENDED PUMP DATA**

Pump Division	Engineered Prod.
Pump Family	7020/7021 Series
Pump Discharge	1.25" Vertical

No Vent Holes in Cover

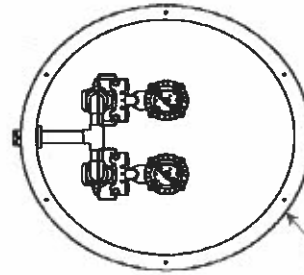

36" Dia. Solid Cover- Fiberglass

**BASIN SIZE PREFERENCES**

Diameter	36"
Height	156"

S.S. Rails

**COVER PREFERENCES**

Surface	Solid
Material	Fiberglass
Vent Quantity	None

24" to Center

**PLUMBING PREFERENCES**

Inlet Hub	4" Pipe Seal
Discharge Piping	1.25"
Discharge Depth	24"
Pipe Material	Sch. 80 PVC
Shutoff Valve	Ball Valve

Side Discharge

1.25" Plumbing Sch. 80 PVC

156" Tall Fiberglass Basin

4" Pipe Seal Loose

**DISCONNECT PREFERENCES**

Class	Stainless Steel
Rail Material	Stainless Steel

1.25" Vertical Rail System S.S. Hardware

F.G. AFD Dia. 42.5"

**DESIGN AIDS**

Hub Invert Depth <sup>1</sup>	18"
Gallons / Inch	4.41 Gal / in
Working Volume <sup>2</sup>	502.3 Gallons

**ACCESSORIES**

Lifting Lugs  
Electrical Coupling

Yes
Loose

<sup>1</sup> Hub is field installed. Depth is used to compute working volumes.

<sup>2</sup> Usable volume between inlet invert and minimum water level.

**NOTES: DRAWING IS NOT TO SCALE.**

**PUMPS NOT INCLUDED - Pumps shown only for reference.**  
Systems include check valves and disconnects as selected.

Individual components may differ from those shown.

Customer is wholly responsible for verifying code compliance.

Consult factory for basins larger than 72" dia. or 144" tall.

This Builder is valid for use until 8/31/2020.

**Pricing**

No
----

**Sign Below For Approval**

Trusted. Tested. Tough.™

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.



SECTION: Z4.10.230  
ZM2345  
0218  
Supersedes  
0515

MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347  
SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961  
(502) 778-2731 • 1 (800) 928-PUMP • FAX (502) 774-3624

visit our web site:  
[zoellerengprod.com](http://zoellerengprod.com)

**PRODUCT FEATURES**  
MODEL 7020 & 7021 GRINDER PUMPS  
*1 and 2 HP - Progressing Cavity*




**FEATURES:**

- Finned Class 30 cast iron construction
- Corrosion resistant powder coated epoxy finish
- Discharge size - 1-1/4" NPT
- 1 & 2 HP, 60 Hz, 1750 RPM  
Model 7020 - 1 HP, 230 Volts/1 Ph  
Model 7021 - 2 HP, 230 Volts/1 Ph
- UL Listed 20 ft. 3-wire SOW cord with 15 amp plug
- Oil-Filled - Hermetically sealed PSC motor with 416 SS motor shaft
- Integral thermal overload protection with automatic reset
- Hardened 440C stainless steel cutter and disc, Rockwell C55-60
- Stainless steel helix hydraulic pump rotor with integral upper deflection shield
- Buna N hydraulic rotor
- Pressure relief valve
- Upper and lower ball bearing construction
- Carbon/Ceramic mechanical seal
- Viton square rings and gasket
- 304 SS hardware
- SS mounting stand for free standing installation
- Preassembled systems available





Product may not be exactly as pictured.

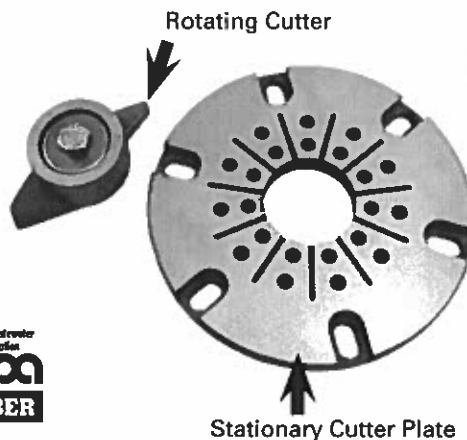


**Electrical Data**


Models	HP	Volts	Phase	RPM	Amps	Service Factor	Weight
E7020	1	230	1	1750	7.0	1.2	88 lbs
E7021	2	230	1	1750	10.5	1.2	91 lbs

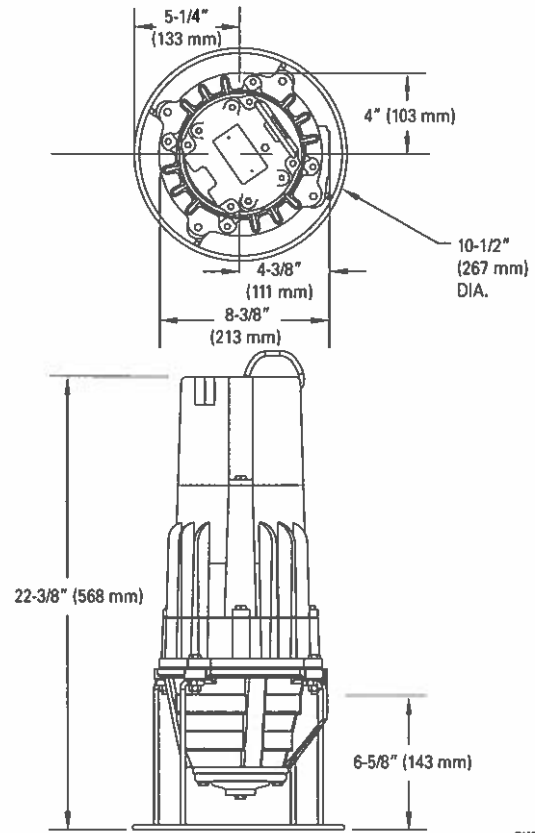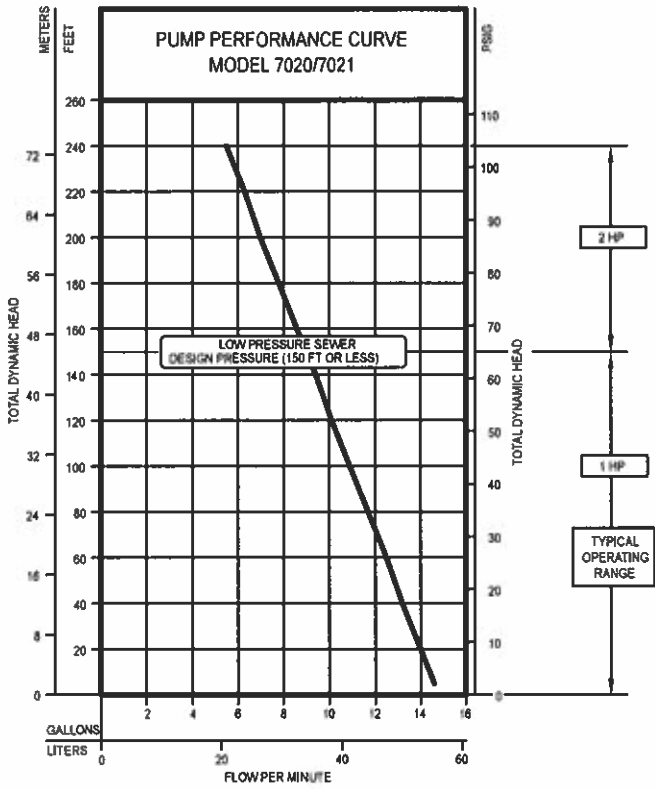

**PACKAGED SYSTEM WITH FLEXIBLE HOSE DISCONNECT**

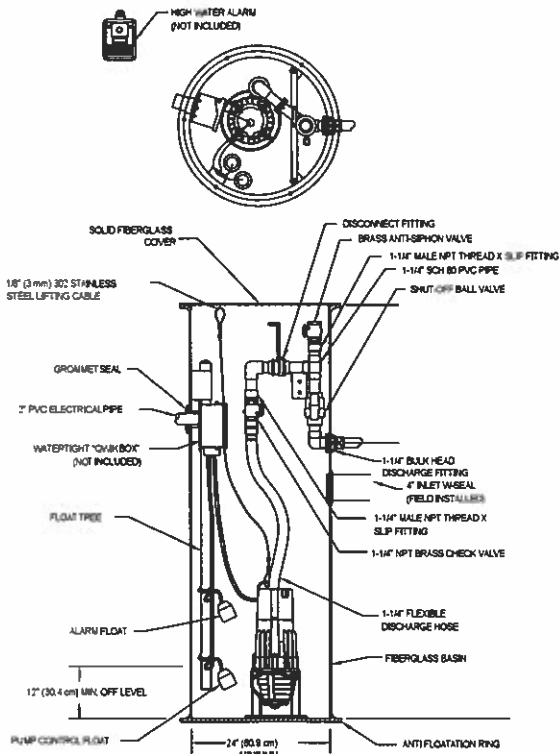

**PACKAGED SYSTEM WITH Z-RAIL DISCONNECT SYSTEM**

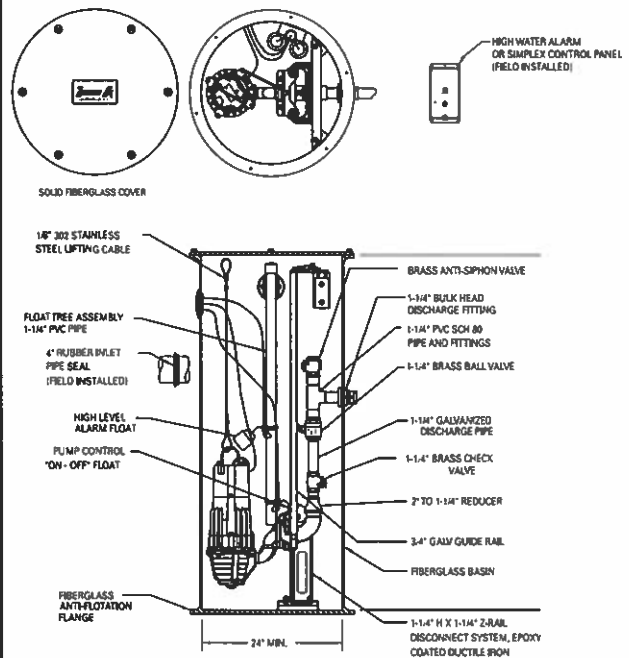

Trusted. Tested. Tough.®

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.



SECTION: Z4.10.240  
ZM2424  
0919  
Supersedes  
0218

MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347  
SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961  
(502) 778-2731 • 1 (800) 928-PUMP • FAX (502) 774-3624

Visit our website:  
zoellerengineered.com

# THE SHARK<sup>®</sup>

Series

## PROGRESSING CAVITY GRINDER PUMP

### FEATURES:

- Meeting UL, CSA and NSF pump standards
- Finned Class 30 Cast Iron Construction
- Corrosion Resistant Powder Coated Epoxy Finish
- Discharge Size - 1-1/4" NPT
- 1 & 2 HP, 60 Hz, 1750 RPM
- Model 7020 - 1 HP, 230 Volts/1 Ph, 7.0 Amps
- Model 7021 - 2 HP, 230 Volts/1 Ph, 10.5 Amps
- UL Listed 20 ft. 3-wire neoprene cord with 15 amp plug
- Oil-Filled - Hermetically Sealed Motor with Class B Windings
- Hardened 440C Stainless Steel Cutter and Disc, Rockwell C55-60
- Stainless Steel Hydraulic Pump Rotor w/ deflector plate
- Pressure Relief Valve
- Upper and Lower Ball Bearing Construction
- Silicon Carbide / Carbon mechanical shaft seal
- Viton Square Rings and Gasket
- Integral Thermal Overload Protection with Automatic Reset
- SS Mounting Stand for free standing installation
- Preassembled Systems Available
- 6932 Replacement Assemblies, see ZM3153

## 7020 & 7021 SERIES PROGRESSING CAVITY GRINDER PUMP MODELS

7020 - 1 HP  
7021 - 2 HP




Tested to UL Standard UL778  
& Certified to CSA  
Standard C22.2 No. 108



NSF/ANSI 40



Hydraulic rotor with deflector

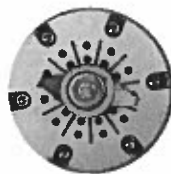

Tri-Slice<sup>®</sup> cutter blade and plate



Integral pressure relief valve



Product may not be exactly as pictured.





# GRINDER SYSTEMS

## (A) GRINDER

### STANDARD FEATURES:

- 1-1/4" NPT Discharge
- Silicon carbide / carbon mechanical seal
- Thermal overload protection
- Hydraulic SS rotor and buna-n stator
- Hardened stainless steel cutter plate / cutter
- Stainless steel shaft
- Stainless steel hardware
- Viton square rings and gasket
- Corrosion resistant powder coated epoxy paint
- 20 ft. power cord

### OPTIONS:

- 25' long cords
- 35' long cords
- 50' long cords

## (A) 7020 & 7021 PROGRESSING CAVITY GRINDER 1 OR 2 HP 1-1/4" N.P.T. DISCHARGE

P/N	WGT.	MODEL	VOLTS	PH	HP	AMP
<input type="checkbox"/> 7020-0004	88	E7020	230	1	1	7.0
<input type="checkbox"/> 7021-0004	91	E7021	230	1	2	10.5

Maximum operating temperature 130 °F (54 °C).

**▲ CAUTION** To ensure proper pump operation, a swing or flapper style check valve must be installed in the pump discharge line. A faulty or non-functional check valve when combined with a pressure sewer may prevent the pump from starting.

Note: All variable level float switches in this section are mechanically activated and do not contain mercury.

## ELECTRICAL - CONTROL / ALARM / FLOATS / JUNCTION BOX (SELECT 1 OF THE 3 COLUMNS)

### QWIK BOX w/ FLOAT SWITCH

#### (B) ALARM PANEL

- P/N 10-0623 Indoor/Outdoor high water alarm with 15' control switch.
- P/N 10-0126 NEMA 4X high water alarm with 15' control switch and dry contact.
- P/N 10-4012 Indoor high water alarm with 15' control switch.

#### (C) PUMP SWITCH & WEIGHT - 1 pump switch required

Single piggy-back type 230 volt 13 amp

- P/N 10-0035 with 15' cord
- P/N 10-0689 weight for alarm float (Indoor Systems only)

#### (D) JUNCTION BOX - 1 required

- P/N 10-0580 Qwik-Box, NEMA 4X with 230 volt receptacle

### PLUGGER PANEL

#### (B) CONTROL PANEL

- P/N 10-2006 Plugger panel, NEMA 4X with high water alarm and 230 volt receptacle.

#### (C) FLOAT SWITCHES - 2 required

Pump: One pump switch  
Alarm: One control switch

- P/N 10-0706 piggy-back pump switch with 20' cord
- P/N 10-0311 piggy-back pump switch with 25' cord
- P/N 10-1956 piggy-back pump switch with 35' cord
- P/N 10-0744 mechanical control switch with 20' cord
- P/N 10-1877 mechanical control switch with 25' cord
- P/N 10-1878 mechanical control switch with 35' cord

#### (D) JUNCTION BOX

J-Box not recommended with this type control.

### SIMPLEX PANEL

#### (B) CONTROL PANEL

- P/N 10-1212 Simplex panel, NEMA 4X, with high water alarm and pump circuit breaker, less float switches.

#### (C) FLOAT SWITCHES - 2 required

Pump: One pump switch  
Alarm: One control switch

- P/N 10-0706 piggy-back pump switch with 20' cord
- P/N 10-0311 piggy-back pump switch with 25' cord
- P/N 10-1956 piggy-back pump switch with 35' cord
- P/N 10-0744 mechanical control switch with 20' cord
- P/N 10-1877 mechanical control switch with 25' cord
- P/N 10-1878 mechanical control switch with 35' cord

#### (D) JUNCTION BOX - optional

- P/N 10-2145 NEMA 4X with 3 cord seals and conduit connection.


**(E) INDOOR AND OUTDOOR PACKAGED SYSTEMS - PUMP & CONTROLS NOT INCLUDED**

**INDOOR SYSTEM**

**FIBERGLASS BASIN**

Pump suspended from steel cover

- P/N 32-0029 24" X 36"

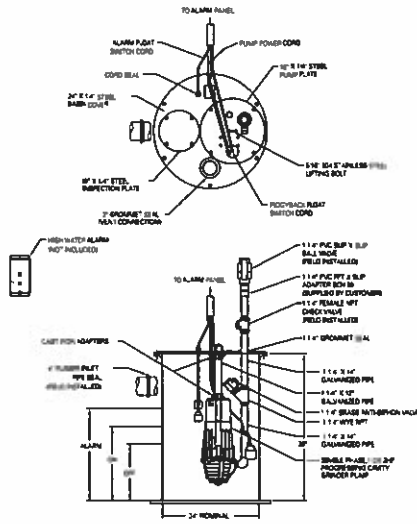


SK2628

- Fiberglass Basin
- Rust Resistant Steel Cover (epoxy coated)
- Inspection Plate
- Pump Plate
- 3" Adaptaflex Vent Seal
- 1-1/4" Adaptaflex Discharge Pipe Seal
- Cord Seal
- 1-4" Rubber Inlet Pipe Seal Field Installed
- Pump Support Hardware
- 1-1/4" Brass Anti-siphon Device
- 1-1/4" NPT Brass Check Valve
- Ball Valve

**OUTDOOR SYS. w/ FLEX HOSE DC**

**FIBERGLASS BASIN & COVER  
1.25" FLEXIBLE HOSE  
w/ DISCONNECT**

- P/N 35-0006 24" X 48"
- P/N 35-0007 24" X 60"
- P/N 35-0008 24" X 72"

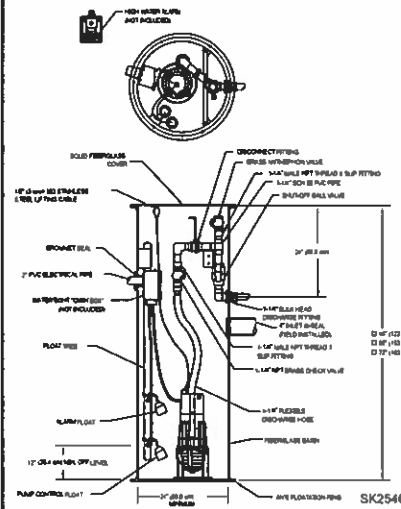


SK2540

- Fiberglass Basin with Anti-flotation Ring
- Flex-hose Discharge Assembly with Disconnect Fitting
- 1-1/4" PVC Discharge Pipe from Disconnect
- 1-1/4" Adaptaflex Discharge Pipe Seal
- 1" Pull Rod
- 8' SS Lifting Cable
- 1-1/4" PVC Ball Valve(s)
- 1-1/4" Brass Check Valve(s)
- 1-1/4" Brass Anti-siphon Device
- PVC Float Tree
- 1-4" Rubber Inlet Pipe Seal (Field Inst.)
- Fiberglass Cover

**OUTDOOR SYSTEM w/ Z-Rail®**

**FIBERGLASS BASIN & COVER  
Z-RAIL® DISCONNECT SYSTEM**

- P/N 33-2003 24" x 60"
- P/N 33-2006 24" x 72"
- P/N 33-2009 24" x 84"
- P/N 33-2015 24" x 96"

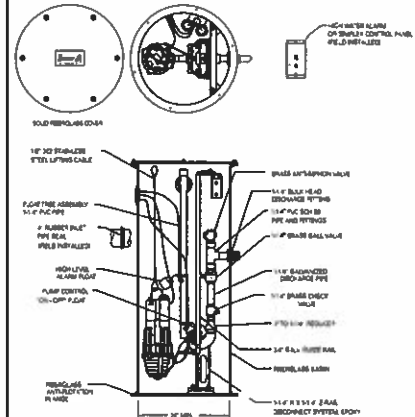

SK3091

- Fiberglass basin with anti-flotation ring
- 1-1/4" Schedule 80 PVC discharge piping
- 1-1/4" H x 1-1/4" Z-rail® P/N 39-0137 disconnect system, epoxy coated ductile iron
- 3/4" Galvanized rail pipes
- Stainless steel lifting cable
- 1-1/4" brass ball valve
- 1-1/4" brass check valve
- Anti-siphon device
- PVC float tree
- 1-4" rubber inlet pipe seal (field inst.)
- 1-2" pipe seal (field inst.) for electrical conduit
- Solid fiberglass cover with Zoeller imprint

**(F) ACCESSORIES FOR FIELD ASSEMBLED SYSTEMS**

**FLEX-HOSE DISCHARGE ASM.**

- P/N 10-2038 w/30" hose

**Z-RAIL® DISCONNECT SYSTEM**

- P/N 39-0137 - Ductile iron
- P/N 39-0138 - Ductile iron w/ stainless steel support bracket
- P/N 39-0139 - Stainless steel stabilizer bracket

**RED LIFTING ROPE**

- P/N 39-0162 - 3/8" X 12"

**SS LIFTING CABLES AND ROD**

- P/N 39-0031 8' cable
- P/N 39-0032 12' cable
- P/N 39-0069 1' rod

**PREWIRED CONDUIT**

(10-0580 Qwik Box Required)

- 5100-0016 - 25'
- 5100-0017 - 35'
- 5100-0018 - 50'

**1.25" DISCHARGE ELBOW**

- P/N 018386 Galvanized
- P/N 019764 SS

**CHECK VALVE**

- P/N 30-0223 1.25" NPT brass
- P/N 30-0250 1.25" SS

**BALL VALVE**

- P/N 30-0165 1.25" PVC

**CURB VALVE ASSEMBLY**

- P/N 10-4698 1.25" SS

# PREPACKAGED AND JOB READY SYSTEMS

## INDOOR

### REQ.

1 7020 or 7021 grinder	P/N _____ (A)
1 Alarm panel	P/N _____ (B)
1 Piggyback pump switch	P/N _____ (C)
1 Weight for alarm float	P/N _____ (C)
1 Basin, cover and hardware	P/N _____ (E)

## OUTDOOR



### REQ.

1 7020 or 7021 grinder	P/N _____ (A)
1 Control panel/alarm system	P/N _____ (B)
1 Piggyback pump switch	P/N _____ (C)
1 Control switch (if required)	P/N _____ (C)
1 Junction box (optional)	P/N _____ (D)
1 Package basin assembly	P/N _____ (E)

# FIELD MOUNT SYSTEMS

### REQ.

1 7020 or 7021 grinder	P/N _____ (A)
1 Control panel / alarm system	P/N _____ (B)
1 Piggyback pump switch	P/N _____ (C)
1 Control switch (if required)	P/N _____ (C)
1 Weight for alarm float (if required)	P/N _____ (C)
1 Junction box (optional)	P/N _____ (D)
1 Optional accessories	P/N _____ (F)

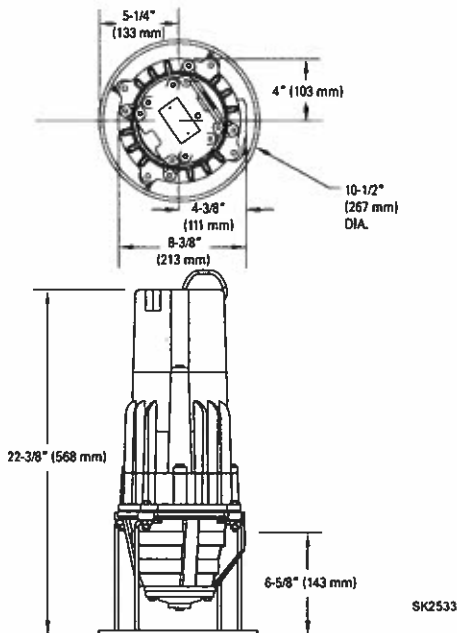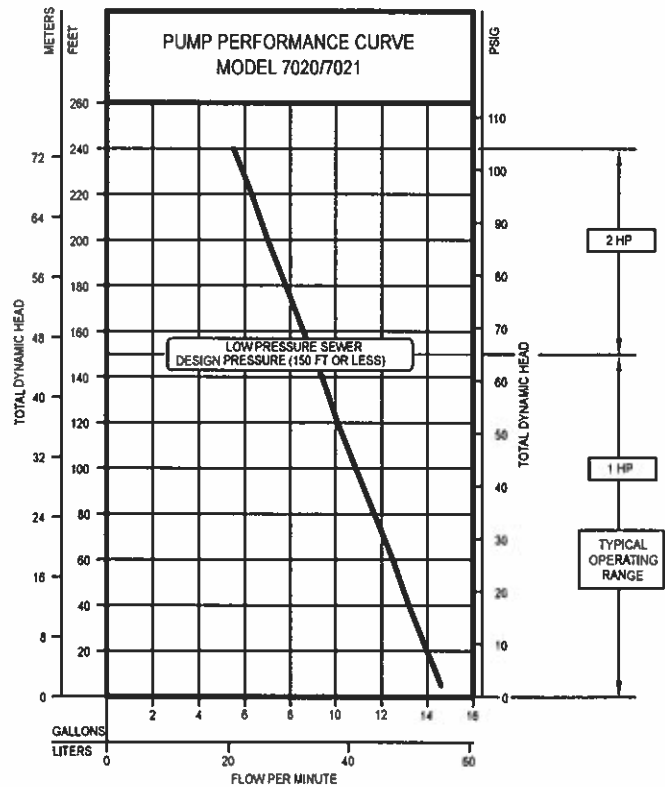

018330ZEP



MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347  
SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961  
(502) 778-2731 • 1 (800) 928-PUMP • FAX (502) 774-3624

Trusted. Tested. Tough.®

visit our web site:  
[zoellerengineered.com](http://zoellerengineered.com)

Trusted. Tested. Tough.®

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.



SECTION: Z1.20.145  
ZM2670  
1119  
Supersedes  
0418

Register your Zoeller Engineered Product on our website:  
<http://reg.zoellerengprod.com/>



MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347  
SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961  
(502) 778-2731 • 1 (800) 928-PUMP • FAX (502) 774-3624

Visit our website:  
[zoellerengineered.com](http://zoellerengineered.com)

# OWNER'S MANUAL



## Commercial Duty Pumps

EFFLUENT	SEWAGE
6155, 6161, 6163, 6165 6185, 6186, 6188, 6189	6267, 6282, 6284 6292, 6293, 6294, 6295 6404, 6405

P/N 152575

### Table of Contents

Safety Instructions.....	1
Limited Warranty.....	2
Preinstallation Checklist.....	2
Electrical Data.....	3-4
General Information.....	4
Pump Wiring Instructions.....	5-6
Operation.....	7
General Maintenance.....	8
Service Checklist.....	8

### Owner's Information

Model Number: \_\_\_\_\_ DateCode: \_\_\_\_\_

Simplex                       Duplex

Job Name: \_\_\_\_\_

Distributor: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_ Zoeller S/O No.: \_\_\_\_\_

Contractor: \_\_\_\_\_

Date of Installation: \_\_\_\_\_

System Readings During Start-up: Voltage \_\_\_\_\_ Amps \_\_\_\_\_

### Safety Instructions

**TO AVOID SERIOUS OR FATAL PERSONAL INJURY OR MAJOR PROPERTY DAMAGE, READ AND FOLLOW ALL SAFETY INSTRUCTIONS IN THIS MANUAL AND ON THE PUMP.**

**THIS MANUAL IS INTENDED TO ASSIST IN THE INSTALLATION AND OPERATION OF THIS UNIT AND MUST BE KEPT WITH THE PUMP.**



**▲ DANGER**

**▲ WARNING**

**▲ CAUTION**

**▲ NOTICE**

This is a **SAFETY ALERT SYMBOL**. When you see this symbol on the pump or in the manual, look for one of the following signal words and be alert to the potential for personal injury or property damage.

**W**arns of hazards that **WILL** cause serious personal injury, death or major property damage.

**W**arns of hazards that **CAN** cause serious personal injury, death or major property damage.

**W**arns of hazards that **CAN** cause personal injury or property damage.

**I**NDICATES SPECIAL INSTRUCTIONS WHICH ARE VERY IMPORTANT AND MUST BE FOLLOWED.

**THOROUGHLY REVIEW ALL INSTRUCTIONS AND WARNINGS PRIOR TO PERFORMING ANY WORK ON THIS PUMP.**

**MAINTAIN ALL SAFETY DECALS.**

**REFER TO WARRANTY ON PAGE 2.**

## LIMITED WARRANTY

Manufacturer warrants, to the purchaser and subsequent owner during the warranty period, every new product to be free from defects in material and workmanship under normal use and service, when properly used and maintained, for a period of one year from date of purchase by the end user, or 18 months from date of original manufacture of the product, whichever comes first. Parts that fail within the warranty period, one year from date of purchase by the end user, or 18 months from the date of original manufacture of the product, whichever comes first, that inspections determine to be defective in material or workmanship, will be repaired, replaced or remanufactured at Manufacturer's option, provided however, that by so doing we will not be obligated to replace an entire assembly, the entire mechanism or the complete unit. No allowance will be made for shipping charges, damages, labor or other charges that may occur due to product failure, repair or replacement.

This warranty does not apply to and there shall be no warranty for any material or product that has been disassembled without prior approval of Manufacturer, subjected to misuse, misapplication, neglect, alteration, accident or uncontrollable act of nature; that has not been installed, operated or maintained in accordance with Manufacturer's installation instructions; that has been exposed to outside substances including but not limited to the following: sand, gravel, cement, mud, tar, hydrocarbons, hydrocarbon derivatives (oil, gasoline, solvents, etc.), or other abrasive or corrosive substances, wash towels or feminine sanitary products,

etc. in all pumping applications. The warranty set out in the paragraph above is in lieu of all other warranties expressed or implied; and we do not authorize any representative or other person to assume for us any other liability in connection with our products.

Contact Manufacturer at, 3649 Cane Run Road, Louisville, Kentucky 40211, Attention: Customer Support Department to obtain any needed repair or replacement of part(s) or additional information pertaining to our warranty.

**MANUFACTURER EXPRESSLY DISCLAIMS LIABILITY FOR SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES OR BREACH OF EXPRESSED OR IMPLIED WARRANTY; AND ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND OF MERCHANTABILITY SHALL BE LIMITED TO THE DURATION OF THE EXPRESSED WARRANTY.**

Some states do not allow limitations on the duration of an implied warranty, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

In instances where property damages are incurred as a result of an alleged product failure, the property owner must retain possession of the product for investigation purpose.

## PREINSTALLATION INFORMATION

1. **Inspect your pump.** Occasionally, products are damaged during shipment. If the unit is damaged, contact your distributor before using. **DO NOT** remove the test plugs in the motor housing nor the lower seal adapter.
2. **Carefully read the literature** provided to familiarize yourself with specific details regarding installation and use. These materials should be retained for future reference.



### WARNING

1. Make certain that the receptacle is within the reach of the pump's power supply cord. **DO NOT USE AN EXTENSION CORD.** Extension cords that are too long or too light do not deliver sufficient voltage to the pump motor. But, more important, they could present a safety hazard if the insulation were to become damaged or the connection end were to fall into the sump.
2. **Make sure the pump electrical supply circuit is equipped with fuses or circuit breakers of proper capacity.** A separate branch circuit is recommended, sized according to the "National Electrical Code" for the current shown on the pump nameplate.
3. **Testing for ground.** As a safety measure, each electrical outlet should be checked for ground using an Underwriters Laboratory Listed circuit analyzer which will indicate if the power, neutral and ground wires are correctly connected to your outlet. If they are not, call a qualified licensed electrician.
4. **For Added Safety.** Pumping and other equipment with a 3-prong grounded plug must be connected to a 3-prong grounded receptacle. For added safety the receptacle may be protected with a ground-fault circuit interrupter. When a pump needs to be connected in a watertight junction box, the plug can be removed and spliced to the supply cable with proper grounding. For added safety this circuit may be protected by a ground-fault circuit interrupter. The complete installation must comply with the National Electrical Code and all applicable local codes and ordinances.
5. **FOR YOUR PROTECTION, ALWAYS DISCONNECT PUMP FROM ITS POWER SOURCE BEFORE HANDLING.** Single phase pumps are supplied with a 3-prong grounded plug to help protect you against the possibility of electrical shock. **DO NOT UNDER ANY CIRCUMSTANCES REMOVE THE GROUND PIN.** The 3-prong plug must be inserted into a mating 3-prong grounded

### SEE BELOW FOR LIST OF WARNINGS

- receptacle. If the installation does not have such a receptacle, it must be changed to the proper type, wired and grounded in accordance with the National Electrical Code and all applicable local codes and ordinances. Three phase pumps require motor starting devices with motor overload protection. Refer to ZM1342, Zoeller's simplex and duplex panel selection guide.
6. The tank is to be vented in accordance with local plumbing code. Pumps **must** be installed in accordance with the National Electrical Code and all applicable local codes and ordinances. Pumps are not to be installed in locations classified as hazardous in accordance with National Electrical Code, ANSI/NFPA 70.
  7. Use pressure rated pipe and fittings when connecting to the discharge of the pump.
  8. **"Risk of Electrical Shock"** Do not remove power supply cord and strain relief or connect conduit directly to the pump.
  9. Installation and servicing of electrical circuits and hardware should be performed by a qualified licensed electrician.
  10. Pump installation and servicing should be performed by a qualified person.
  11. Risk of electric shock - These pumps have not been investigated for use in swimming pool and marine areas.
  12. Prop65 warning for California residents: Cancer and reproductive harm- [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**CAUTION**

1. Check to be sure your power source is capable of handling the voltage requirements of the motor, as indicated on the pump nameplate.
2. The installation of float switches is the responsibility of the installing party and care should be taken that the tethered float switch will not hang up on the pump apparatus or pit peculiarities and is secured so that the pump will shut off. It is recommended that rigid piping and fittings be used and the pit be 36" or larger in diameter.
3. **INFORMATION - VENT HOLE PURPOSE.** It is necessary that all submersible pumps capable of handling various sizes of solid waste be of the bottom intake design to reduce clogging and seal failures. If a check valve is incorporated in the installation, a vent hole (approx. 3/16") must be drilled in the discharge pipe below the check valve and pit cover to purge the unit of trapped air. Water stream will be visible from this hole during pump run periods. This vent hole should be checked periodically for clogging and cleaned as necessary. Trapped air is caused by agitation and/or a dry basin.

**SEE BELOW FOR LIST OF CAUTIONS**

4. Water hammer creates momentary high pressure surges. These surges can cause severe damage to check valves and the piping system. Consideration for water hammer must be included in the piping system design. Reference ASPE Data Book, Chapter 2.33. Some systems may require external spring or lever weighted check valves or other engineered solutions.
5. Three phase pumps must be connected for proper rotation, which is counterclockwise looking into impeller inlet or, refer to the directional arrow on the pump housing.
6. Care should be taken during the initial installation to be sure that adequate air supply is available whenever any person is in the basin. Always follow OSHA guidelines on confined space requirements.

**ELECTRICAL DATA**

Model	HP	RPM	Voltage	Phase	Hertz	Amps			KVA Code	Winding Resistance Line-to-Line
						Full Load	Shut Off	Locked Rotor		
N6155	1/2	3450	115	1	60	10.5	6.4	17.1	C	1.92/1.28*
E6155	1/2	3450	230	1	60	5.3	3.9	8.6	C	6.06/4.04*
N6161	1/2	3450	115	1	60	15.0	7.7	52.2	N	.53/.46*
E6161	1/2	3450	230	1	60	7.5	3.6	15.1	H	4.6/4.0*
I6161	1/2	3450	200	1	60	8.8	6.3	19.8	J	3.5/3.0*
J6161	1/2	3450	200	3	60	6.4	3.1	23.6	S	6.1/5.3
F6161	1/2	3450	230	3	60	5.2	2.7	24.0	T	5.5/4.8
G6161	1/2	3450	460	3	60	2.9	1.4	12.0	T	22.1/19.2
BA6161	1/2	3450	575	3	60	2.4	1.3	11.3	U	38.0/33.0
N6163	1/2	3450	115	1	60	15.0	8.4	52.2	N	.53/.46*
E6163	1/2	3450	230	1	60	7.5	4.0	15.1	H	4.6/4.0*
I6163	1/2	3450	200	1	60	8.5	4.3	19.8	J	3.5/3.0*
J6163	1/2	3450	200	3	60	6.0	3.4	23.6	S	6.1/5.3
F6163	1/2	3450	230	3	60	4.8	3.0	24.0	T	5.5/4.8
G6163	1/2	3450	460	3	60	2.9	1.5	12.0	T	22.1/19.2
BA6163	1/2	3450	575	3	60	2.4	1.5	11.3	U	38.0/33.0
E6165	1	3450	230	1	60	10.2	5.5	20.1	E	3.0/2.6*
I6165	1	3450	200	1	60	12.6	6.1	26.8	F	2.0/1.8*
J6165	1	3450	200	3	60	7.5	9.8	31.1	M	3.6/3.2
F6165	1	3450	230	3	60	7.4	3.8	29.8	N	5.5/4.7
G6165	1	3450	460	3	60	3.7	2.1	14.9	N	21.8/19.0
BA6165	1	3450	575	3	60	3.0	1.7	10.0	L	39.2/34.1
E6185	1	3450	230	1	60	9.8	5.0	20.1	E	3.0/2.6*
I6185	1	3450	200	1	60	11.5	5.1	26.8	F	2.0/1.8*
J6185	1	3450	200	3	60	7.5	3.6	31.1	M	3.6/3.2
F6185	1	3450	230	3	60	7.4	3.8	29.8	N	5.5/4.7
G6185	1	3450	460	3	60	3.7	1.9	14.9	N	21.8/19.0
BA6185	1	3450	575	3	60	3.3	1.6	10.0	L	39.2/34.1
E6186	1-1/2	3450	230	1	60	13.7	9.3	45.7	H	1.3/1.1*
I6186	1-1/2	3450	200	1	60	17.2	11.8	54.5	J	.84/.73*
J6186	1-1/2	3450	200	3	60	10.3	6.0	45.2	M	2.5/2.2
F6186	1-1/2	3450	230	3	60	9.2	5.5	39.4	M	3.4/2.9
G6186	1-1/2	3450	460	3	60	4.6	2.8	19.7	M	13.5/11.7
E6188	1-1/2	3450	230	1	60	14.0	7.4	45.7	H	1.3/1.1*
I6188	1-1/2	3450	200	1	60	16.8	9.8	54.5	J	.84/.73*
J6188	1-1/2	3450	200	3	60	10.3	4.7	45.2	M	2.5/2.2
F6188	1-1/2	3450	230	3	60	8.9	4.1	39.4	M	3.4/2.9
G6188	1-1/2	3450	460	3	60	4.6	2.0	19.7	M	13.5/11.7
E6189	2	3450	230	1	60	17.1	9.4	45.7	F	1.3/1.1*
I6189	2	3450	200	1	60	20.5	11.5	54.5	F	.84/.73*
J6189	2	3450	200	3	60	13.2	6.8	45.2	J	2.5/2.2
F6189	2	3450	230	3	60	11.2	5.1	39.4	J	3.4/2.9
G6189	2	3450	460	3	60	6.0	2.8	19.7	J	13.5/11.7
BA6189	2	3450	575	3	60	5.8	2.1	15.9	J	20.8/18.1
N6267	1/2	1725	115	1	60	10.4	6.8	25.0	G	2.5/1.7
E6267	1/2	1725	230	1	60	5.8	3.6	12.5	G	8.1/7.1*
I6267	1/2	1725	200-208	1	60	6.2	4.2	21.0	K	6.4/5.2*
J6267	1/2	1725	200-208	3	60	2.6	1.9	8.3	G	14.7/13.1
F6267	1/2	1725	230	3	60	2.6	2.0	7.1	G	18.6/16.2
G6267	1/2	1725	460	3	60	1.5	1.1	5.1	K	49.0/43.0
N6282	1/2	1725	115	1	60	10.3	7.3	30.2	H	1.4/1.2*
E6282	1/2	1725	230	1	60	5.0	4.0	15.1	H	5.7/4.9*
I6282	1/2	1725	200	1	60	6.1	4.5	17.7	H	4.7/4.0*
J6282	1/2	1725	200	3	60	3.6	2.5	12.8	K	7.9/6.9
F6282	1/2	1725	230	3	60	3.0	2.3	12.2	L	9.4/8.1
G6282	1/2	1725	460	3	60	1.7	1.1	6.1	L	37.4/32.5
BA6282	1/2	1725	575	3	60	1.4	1.1	5.11	M	63.6/55.3

\* Line to line reading will only reflect the run winding resistance. Start winding resistance can only be measured after removing the cover.

CONTINUED ON NEXT PAGE

## ELECTRICAL DATA, continued


Model	HP	RPM	Voltage	Phase	Hertz	Amps			KVA Code	Winding Resistance Line-to-Line
						Full Load	Shut Off	Locked Rotor		
E6284	1	1725	230	1	60	8.9	6.7	24.9	G	2.5/2.2*
I6284	1	1725	200	1	60	9.3	6.4	26.8	F	2.0/1.8*
J6284	1	1725	200	3	60	5.5	4.0	26.3	L	3.0/2.6
F6284	1	1725	230	3	60	5.0	4.0	22.2	K	4.9/4.3
G6284	1	1725	460	3	60	2.6	1.9	11.1	K	19.0/17.0
BA6284	1	1725	575	3	60	2.2	1.7	12.1	N	20.4/17.7
N6292	1/2	3450	115	1	60	15.0	10.6	52.2	N	.53/.46*
E6292	1/2	3450	230	1	60	7.5	4.7	15.1	H	4.6/4.0*
I6292	1/2	3450	200	1	60	8.8	7.4	19.8	J	3.5/3.0*
F6292	1/2	3450	230	3	60	5.2	3.5	24.0	T	5.5/4.8
J6292	1/2	3450	200	3	60	6.4	4.0	23.6	S	6.1/5.3
G6292	1/2	3450	460	3	60	2.9	1.7	12.0	T	22.1/19.2
BA6292	1/2	3450	575	3	60	2.4	1.7	11.3	U	38.0/33.0
E6293	1	3450	230	1	60	10.2	6.6	20.1	E	3.0/2.6*
I6293	1	3450	200	1	60	12.0	7.5	26.8	F	2.0/1.8*
J6293	1	3450	200	3	60	8.2	5.2	31.1	M	3.6/3.2
F6293	1	3450	230	3	60	7.6	5.2	29.8	N	5.5/4.7
G6293	1	3450	460	3	60	4.0	2.6	14.9	N	21.8/19.0
BA6293	1	3450	575	3	60	3.3	2.1	10.0	L	39.2/34.1
E6294	1-1/2	3450	230	1	60	13.7	9.7	45.7	H	1.3/1.1*
I6294	1-1/2	3450	200	1	60	17.8	11.6	54.5	J	.84/.73*
J6294	1-1/2	3450	200	3	60	10.8	6.2	45.2	M	2.5/2.2
F6294	1-1/2	3450	230	3	60	9.5	5.6	39.4	M	3.4/2.9
G6294	1-1/2	3450	460	3	60	4.8	2.8	19.7	M	13.5/11.7
BA6294	1-1/2	3450	575	3	60	3.8	2.2	15.9	M	20.8/18.1
E6295	2	3450	230	1	60	17.1	12.0	45.7	F	1.3/1.1*
I6295	2	3450	200	1	60	20.5	14.7	54.5	F	.84/.73*
J6295	2	3450	200	3	60	14.3	8.8	45.2	J	2.5/2.2
F6295	2	3450	230	3	60	12.2	7.5	39.4	J	3.4/2.9
G6295	2	3450	460	3	60	6.1	3.8	19.7	J	13.5/11.7
BA6295	2	3450	575	3	60	4.9	3.0	15.9	J	20.8/18.1
E6404	2	1725	230	1	60	12.9	9.9	44.8	B	1.80/1.60*
I6404	2	1725	200	1	60	14.4	11.5	49.6	B	1.4/1.3*
J6404	2	1725	200	3	60	13.8	13.1	56.8	H	1.6/1.3
F6404	2	1725	230	3	60	10.5	9.7	44.6	G	2.3/2.0
G6404	2	1725	460	3	60	5.2	4.8	22.3	G	9.1/8.0
BA6404	2	1725	575	3	60	4.1	3.8	17.6	G	14.6/12.7
E6405	3	1725	230	1	60	19.0	11.3	44.8	B	1.80/1.60*
I6405	3	1725	200	1	60	20.2	8.8	49.6	B	1.4/1.3*
J6405	3	1725	200	3	60	14.8	12.5	56.8	H	1.6/1.3
F6405	3	1725	230	3	60	12.2	9.7	44.6	G	2.3/2.0
G6405	3	1725	460	3	60	6.1	4.8	22.3	G	9.1/8.0
BA6405	3	1725	575	3	60	4.8	3.8	17.6	G	14.6/12.7

\* Line to line reading will only reflect the run winding resistance. Start winding resistance can only be measured after removing the cover.

AWG	ohms/ft	Added Resistance	
		25'	50'
18	0.0064	0.16	0.32
16	0.0040	0.10	0.20
14	0.0025	0.06	0.13
12	0.0016	0.04	0.08

For total resistance including power cable, see chart.

### TYPICAL INSTALLATION USING DUPLEX CONTROL PANEL

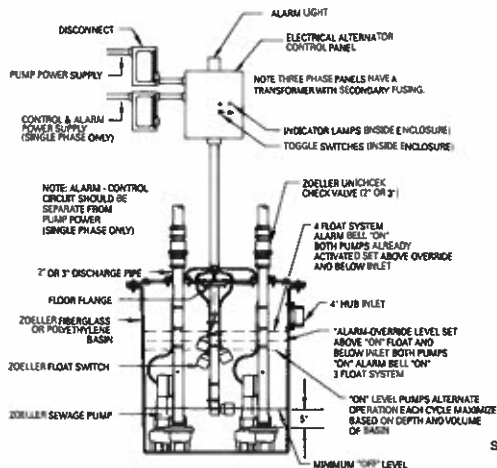

- (1) Electrical wiring and protection must be in accordance with National Electrical Code and any other applicable state and local electrical requirements.
- (2) Install proper Zoeller unichuck (combination union and check valve), preferably just above the basin to allow easy removal of the pump for cleaning or repair. On sewage, effluent or dewatering, if high head or below cover installation is required use 30-0152 on 1-1/2" and 2" pipe and 6030-0160 on 3" pipe. See (6) below.
- (3) All installations require a basin cover to prevent debris from falling into the basin and to prevent accidental injury.
- (4) Gas tight seals are required in all sewage installations to contain gases and odors.
- (5) Vent gases and odors to the atmosphere through vent pipe.
- (6) When a Unichuck is installed, drill a 3/16" dia. hole in the discharge pipe even with the top of the pump. NOTE: THE HOLE MUST ALSO BE BELOW THE BASIN COVER AND CLEANED PERIODICALLY (High Head unit see Caution #3 on front page).
- (7) Securely tape or clamp power cord to discharge pipe.
- (8) Locate float switches as shown in sketch to left. The "off" point must be above motor housing and positioned 180° from the inlet.
- (9) Use full-size discharge pipe.
- (10) Basin must be in accordance with applicable codes and specifications.
- (11) Pump must be level and float mechanism clear of sides of basin before starting pump.
- (12) Basin must be clean and free of debris after installation.
- (13) Shut Off Valve to be installed according to any and all codes.

NOTE: See ZM1342 and ZM1536 for Panels, Alarms, Junction Boxes & Floats.

# PUMP WIRING INSTRUCTIONS



**▲ WARNING** Installation and checking of electrical circuits and hardware should be performed by a qualified licensed electrician.

**▲ WARNING** RISK OF ELECTRICAL SHOCK Do not remove power supply cord and strain relief or connect conduit directly to the pump.

**▲ CAUTION** Power cords, sensor cords, and float cords all must be sealed to prevent gases from the basin entering the control panel.

---

## INSTRUCTIONS FOR CHECKING ROTATION OF THREE PHASE UNITS

It is very important that these units be connected for proper rotation. Since no rotating parts are visible without removing the pump from the pit, the rotation on 3 phase units should be checked before installation into the pit as follows:

After the proper electrical connections are made, momentarily energize the pump observing the direction of kick back due to starting torque. The rotation is correct if the kick back is in the opposite direction of the rotation arrow. If the rotation is not correct, disconnect power and switch any two power leads. Turn power back on and retest for proper rotation. If uncertain, the pump will draw the fewest amps when rotating in the proper direction. Directional arrows are also found on the pump housing.

## MOISTURE SENSORS (OPTIONAL FEATURE)

- (1) Pumps with moisture sensors will have a separate small diameter sensor cord in addition to the power cord.
- (2) Sensor cord conductor wires are connected to sensor probes in the lower seal cavity and cap assembly. The conductor wires are terminated in the control panel for activating an indicator light when moisture is present in the lower seal cavity, motor cavity or cord cap assembly.
- (3) When the moisture indicator light is activated the pump should be serviced within 30 days to avoid damage to the motor and bearings.
- (4) Oil in the motor housing and lower seal cavity should be checked when pump is serviced. If oil from the motor housing contains water or other contamination, both seals should be replaced during maintenance. Always replace with new factory recommended oil and service parts. All warranty repairs must be made by Zoeller Authorized Service Stations.
- (5) On existing applications where the control panel only has one moisture sensor hookup per pump, one moisture sensor lead from the pump should be hooked to the moisture sensor lead in the panel, the other moisture sensor lead from the pump should be hooked to ground to complete the circuit.
- (6) The moisture sensor circuit can be checked for continuity (complete circuit) with a (Volt-OHM-Meter). Set the VOM to read resistance and connect the VOM leads to the sensor cord black and white wires. The VOM should read approximately 330k Ohms when the pump is moisture free. Resistance readings significantly lower indicates that moisture has entered into the pump assembly. If VOM reading is open, a problem exists with moisture sensor circuit. Check resistance between the green ground conductor of the pump power cord and the sensor cord black and white wires where the resistance reading should indicate an open circuit. If VOM reading returns a reading other than open, then a problem exists and the pump should be taken to a Zoeller Authorized Service Station.

## PUMPS WITHOUT MOISTURE SENSORS

- (1) Double seal pumps offer additional motor protection, but sensor probes are optional.
- (2) Pumps without sensor probes should be inspected on a periodic preventative maintenance schedule.
- (3) The oil in the motor housing and lower seal cavity should be checked when pump is serviced. If oil contains water or other contaminations, both seals and oil should be replaced during maintenance. Always replace with new factory recommended oil and service parts. All warranty repairs must be made by Zoeller Authorized Service Stations.

## CONTROL PANELS

These pumps are nonautomatic. They require a control panel. A motor starter circuit, control circuit, and alarm circuit within the panel are standard features. Outdoor enclosures and alternating relays are often required. Variable level float switches are the most common level sensing device. The following should be noted:

**3 phase pumps require overload protection in panel. Use with approved motor control that matches motor input in full load amperes with overload element(s) selected or adjusted in accordance with control instructions.**



# WIRING INSTRUCTIONS

## Single Phase



**⚠ WARNING** FOR YOUR PROTECTION, ALWAYS DISCONNECT PUMP FROM ITS POWER SOURCE BEFORE HANDLING. Single phase pumps are supplied with a 3-prong grounded plug to help protect you against the possibility of electrical shock. **DO NOT UNDER ANY CIRCUMSTANCES REMOVE THE GROUND PIN.**




The 3-prong plug must be inserted into a mating 3-prong grounded receptacle when not wired into a control panel. If an installation of this type does not have such a receptacle, it must be changed to the proper type, wired and grounded in accordance with the National Electrical Code and all applicable local codes and ordinances.



**⚠ WARNING** RISK OF ELECTRICAL SHOCK Do not remove power supply cord and strain relief or connect conduit directly to the pump.

**⚠ WARNING** Installation and checking of electrical circuits and hardware should be performed by a qualified licensed electrician.

Most single phase pumps can be controlled with a wide-angle float switch but, often use a control panel. Refer to ZM1342 for recommended simplex and duplex control panels.

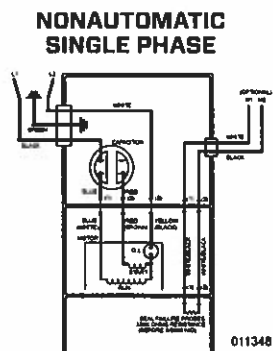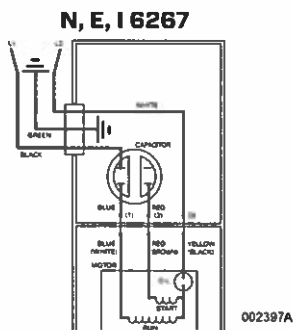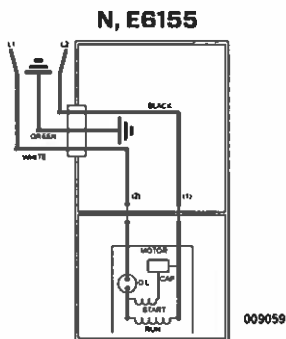

## Three Phase




**⚠ WARNING** FOR YOUR PROTECTION, ALWAYS DISCONNECT PUMP FROM ITS POWER SOURCE BEFORE HANDLING. To automatically operate a nonautomatic three phase pump, a control panel is required. Follow the instructions provided with the panel to wire the system.

Before installing a pump, check the pump rotation to insure that wiring has been connected properly to power source, and that the green lead of power cord (See wiring diagram), is connected to a valid ground, momentarily energize the pump, observing the directions of kick back due to starting torque. Rotation is correct if kick back is in the opposite direction of the rotation arrow on the pump casing. If rotation is not correct, switching of any two power leads other than ground, should provide the proper rotation.

All three phase pumps require motor starting devices with motor overload protection. Refer to ZM1342 for recommended simplex and duplex panels.

### NONAUTOMATIC 3 PHASE

### NONAUTOMATIC THREE PHASE

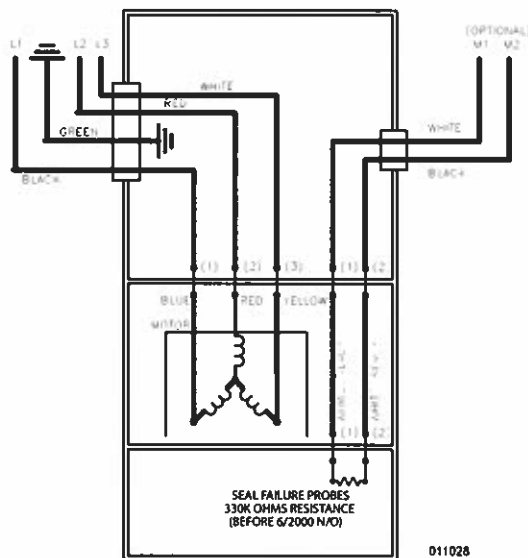

## CONTROL PANELS

These pumps are nonautomatic. They typically require a control panel. A motor starter circuit, control circuit, and alarm circuit within the panel are standard features. Outdoor enclosures and alternating relays are often required. Variable level float switches are the most common level sensing device. The following should be noted.

- (1) A pump having the seal failure sensor option requires a panel set up to incorporate this feature.
- (2) All 3 phase pumps require overload protection in panel.

# OPERATION

## GENERAL

Zoeller pumps are lubricated and tested at the factory prior to shipment and require minimum pre-start-up maintenance.

Maximum operating temperature of pump liquid for standard model pumps must not exceed 130 °F (54 °C). For longest service life all pumps should be totally submerged on long pumping cycles and a maximum of 1/2 hour run time per hour.

These units are not designed to handle liquids other than water or sewage. If pump is used in water contaminated with heavy, viscous, or abrasive materials, the warranty will be voided.

## NAMEPLATE DATA

The nameplate, located on the top of pump, indicates specific information about the construction of the pump. The model number, and date code information should be recorded on the front page in the "Owner's Information" section of this manual.

## SHORT TERM STORAGE

If pump is to be stored, the following is advised:

- Store pump inside whenever possible or cover with some type of protective covering
- Tape or seal in plastic bag the terminal ends of wire leads
- Spray coat unpainted surfaces with rust inhibiting oil
- The impeller should be rotated every three months in order to keep the seals lubricated and not develop a permanent set

If panel is to be stored, the following is advised:

- Store the panel inside whenever possible and leave in the shipping box
- All openings shall be sealed
- Store in an upright position
- Do not stack anything on top of panel

## START-UP PROCEDURE

Before placing the equipment into operation the following checked:

- Correct pump rotation (3 Phase units only)
- Clean pit
- Panel dry and securely installed
- Floats positioned properly
- Discharge valves open
- 3/16" vent hole drilled in pipe between check valve and pump

Once the above has been verified proceed with the following checks:

- Pump power cables properly connected to panel
- Float cables properly connected to panel
- Conduit connections to panel are properly sealed
- Motor overload protection is set in the panel
- After installing the pump into the containment area, with adequate submergence, open the shut-off valve fully. Start the unit using manual controls. If flow is appreciably less than rated performance, pump may be air locked. To expel trapped air, jog the unit several times, using the manual controls
- Have a qualified electrician take voltage and current measurements on the black wire of single phase or all three power wires of three phase with the pump running. Record these readings in the space provided in the "Owner's Information" section on page 1 of this manual for future reference

After the preoperational functional test has been completed, system is ready for operation. Zoeller recommends completing a Start-up Report (ZM1074) whenever a system is started for the first time or after a system has had a significant change take place (i.e. pump replacement, overhaul, etc.). A copy of the Start-up Report should remain with the system for future reference.

## ADJUSTMENT PROCEDURE

**Pumps:** No adjustments are required other than assuring correct rotation.

**Panels:** The motor overload protection in the panel must be set to the F.L.A. rating on the pump nameplate (or refer to pump data sheet).

**Floats:** Refer to the system drawing for desired location of each float function.

**Valves:** Discharge valves should be placed in the fully open position. Systems should not be operated for extended periods of time with the discharge valves partially closed due to damaging the valve.

## SHUTDOWN PROCEDURES

If a system is shutdown for more than six months, the following is recommended:

**Pumps:** If pit is to remain dry, then the pump can remain in the pit. With the pump in the pit, it should be operated for five minutes once every three months. If the pit is to remain wet, the pump should be removed and stored as noted above.

**Panels:** The panel should have all openings sealed to prevent moisture and dust from entering the enclosure. Prior to restarting system, the panel should be inspected for presence of moisture and any loose connections.

**Valves:** Consult the valve/actuator supplier for information concerning these systems components.

## GENERAL MAINTENANCE

**▲ NOTICE** Repair and service should be performed by a Zoeller Pump Company authorized service station.

### SAFETY PROCEDURES



**▲ WARNING** For your protection, always disconnect pump and panel from its power source before handling.



**▲ WARNING** Never enter the basin until it has been properly vented and tested. Any person entering a basin should be wearing a harness with safety rope extending to the surface so that they can be pulled out in case of asphyxiation. Sewage water gives off methane and hydrogen sulfide gases, both of which can be highly poisonous.

Installation and checking of electrical circuits and hardware should be performed by a qualified electrician.

Pump is never to be lifted by power cord.



**▲ WARNING** Unit must be cleaned and disinfected, inside the pumping chamber and all exterior surfaces, prior to servicing.

### GENERAL SYSTEM INSPECTION

Before the system is placed into operation, it should be inspected by a qualified technician. Once in service, regular inspections are recommended.

**▲ WARNING** Wiring and grounding must be in accordance with the National Electrical Code and all applicable local codes and ordinances.



### LUBRICATION PROCEDURES

No lubrication is required.

If pumps are to be stored for more than six months, refer to short term storage procedure in the Operation section.

### PREVENTIVE MAINTENANCE

Preventive maintenance is recommended to ensure a long service life from the product. Provided is a suggested maintenance schedule.

#### Every six months:

- Check for proper and unobstructed float operation
- Listen for proper check valve operation

#### Every 5 years or 10,000 hours of operation:

- Remove pump, inspect and service using a Zoeller rebuild kit
- Flush and clean basin

### DOUBLE SEAL PUMPS

Double seal pumps offer extra protection when the pump is supplied with optional moisture sensors, check the control panel's seal failure light for a warning. Whenever the seal leak light is activated, it's indicating that moisture is present and, the pump should be removed and serviced in order to avoid damage to the motor.

## SERVICE CHECKLIST



**▲ WARNING** Electrical precautions. Before servicing the pump, always shut off the main power circuit. Make sure you are wearing insulated protective sole shoes and not standing in water. Under flooded conditions, contact your local electric company or a qualified licensed electrician for disconnecting electrical service to the pump prior to removal.



**▲ WARNING** Pumps contain oil which becomes pressurized and hot under operating conditions. Allow 2-1/2 hours after shut down before servicing pump.

Condition	Common Causes
A. Pump will not start or run.	Blown fuse, open circuit breaker, low voltage, no control voltage, thermal overload open, defective capacitor circuit, impeller clogged, float switch held down or defective, incorrect wiring in control panel, water in cap assembly.
B. Motor overheats and trips overload.	Incorrect voltage, impeller restricted, negative head (discharge lower than intake of pump). Defective "off" float. Pump runs continuously at low water level. Low oil level in motor shell. Reverse rotation of a 3 phase pump.
C. Pump will not shut off.	Air lock, debris under float assembly, defective switch, incoming flow rate exceeds capacity of pump.
D. Pump operates but delivers little or no water.	Intake clogged with grease or sludge, pump air locked (clear vent hole), low or incorrect voltage, clogged discharge line, operating near shut-off head.
E. Pump starts and stops too often.	Check valve stuck open or defective. Sump pit too small to handle incoming flow rate. Level control out of adjustment. Thermal overload tripping.
F. Red beacon comes on at control panel.	High water in pit. Check pump for clogging, or overload trip. See "A", "B" and "D" above.
G. Grease and solids accumulate in pit around pump.	Break up solids and run pump with water running into the pit. Allow level to lower to the pump intake. Heavy accumulations of grease may require a dish soap additive. Continue until solids are cleared from the pit. Do not drain kitchen grease down the sink.